

FIG.1
PRIOR ART

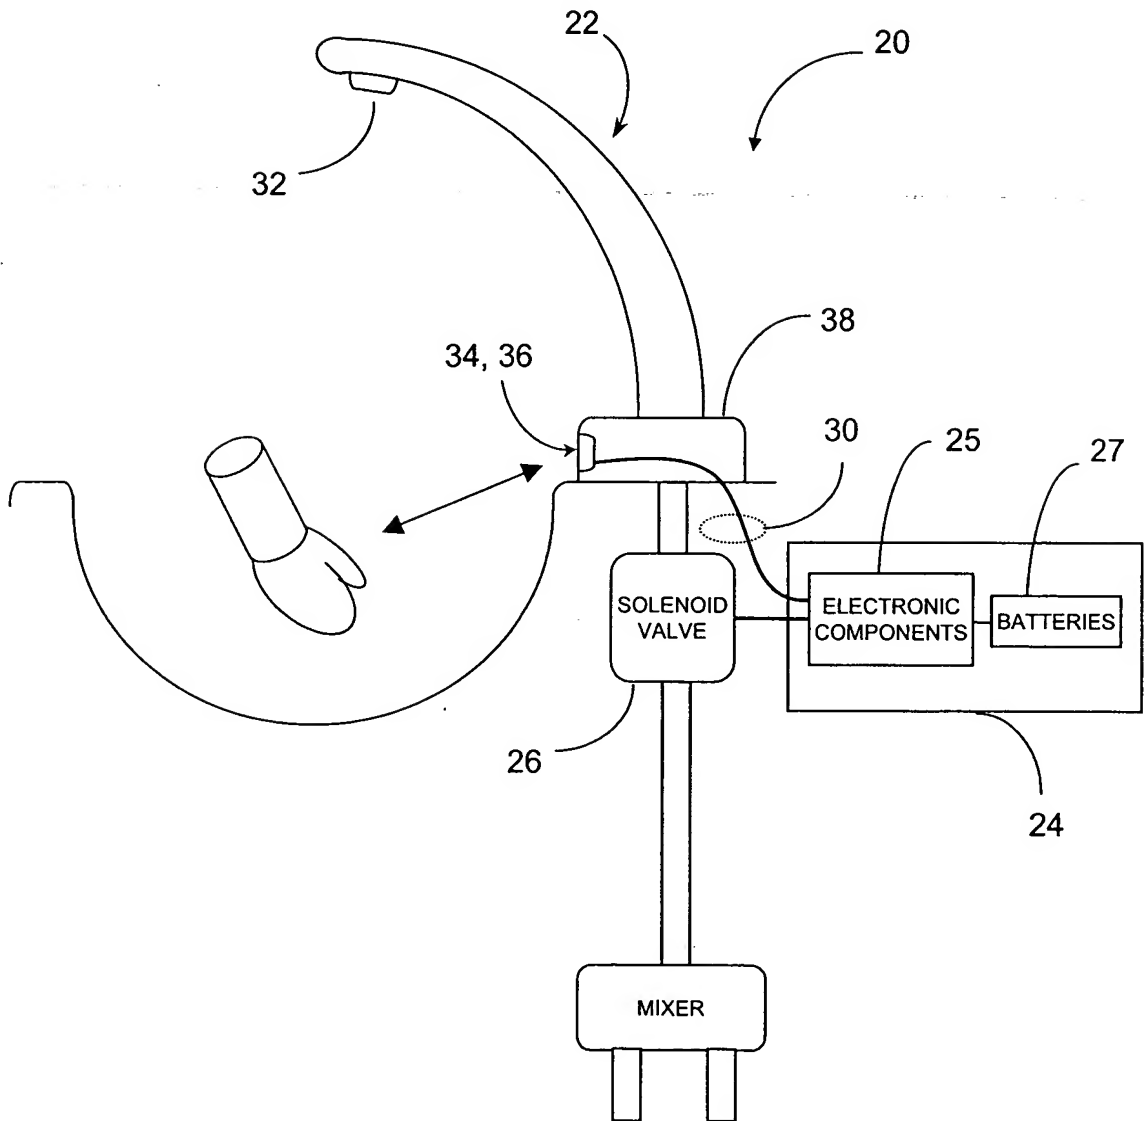


FIG. 1

FIG. 2


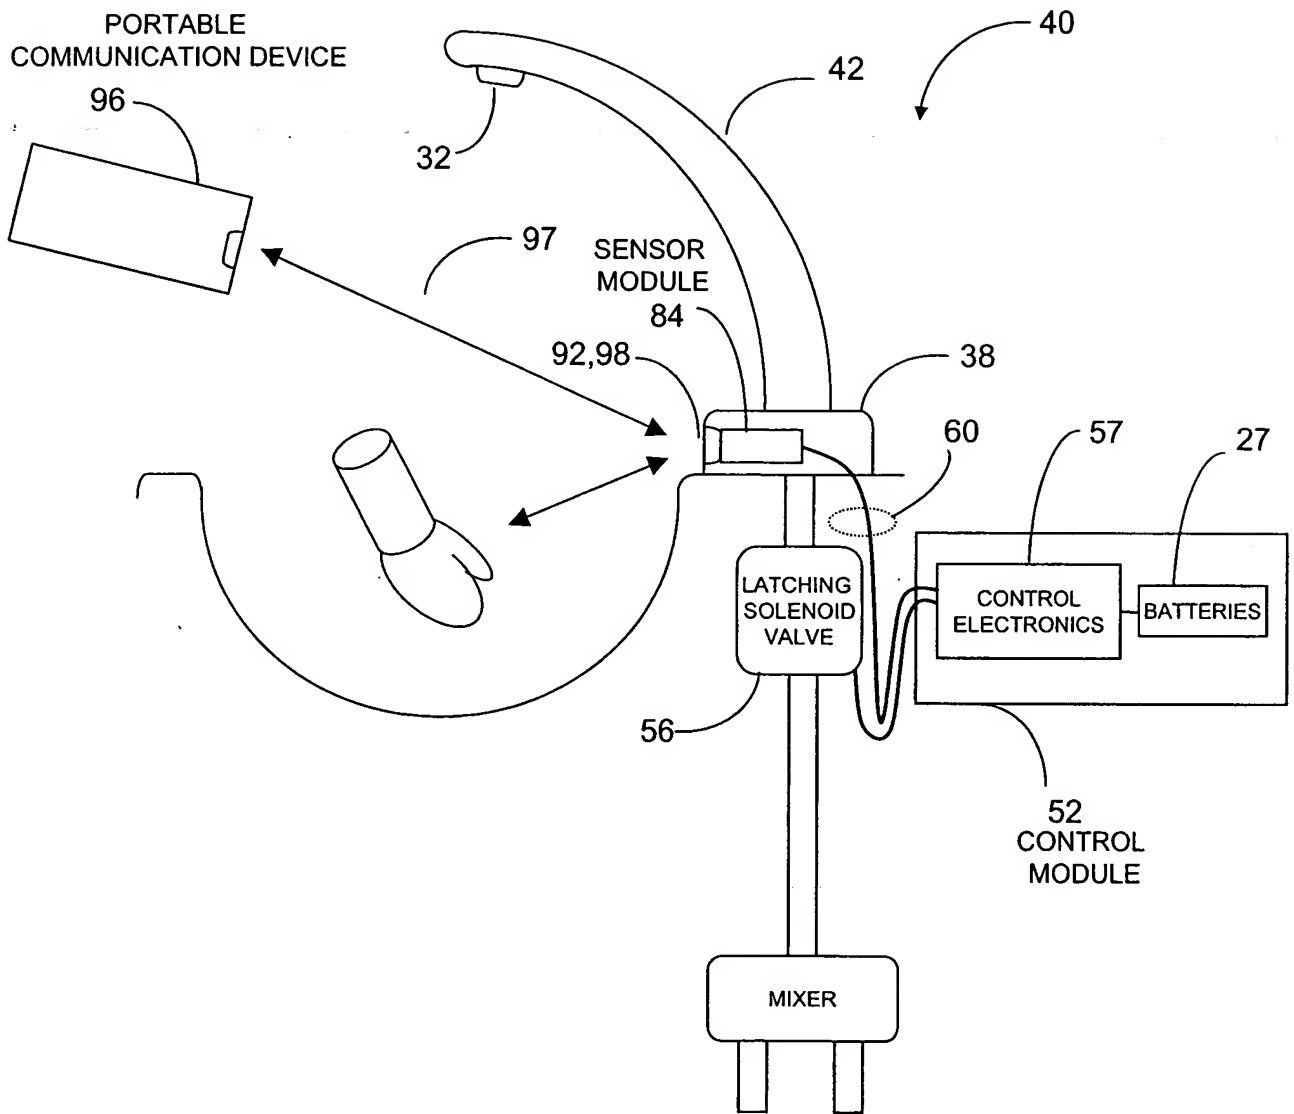


FIG. 2

FIG. 3

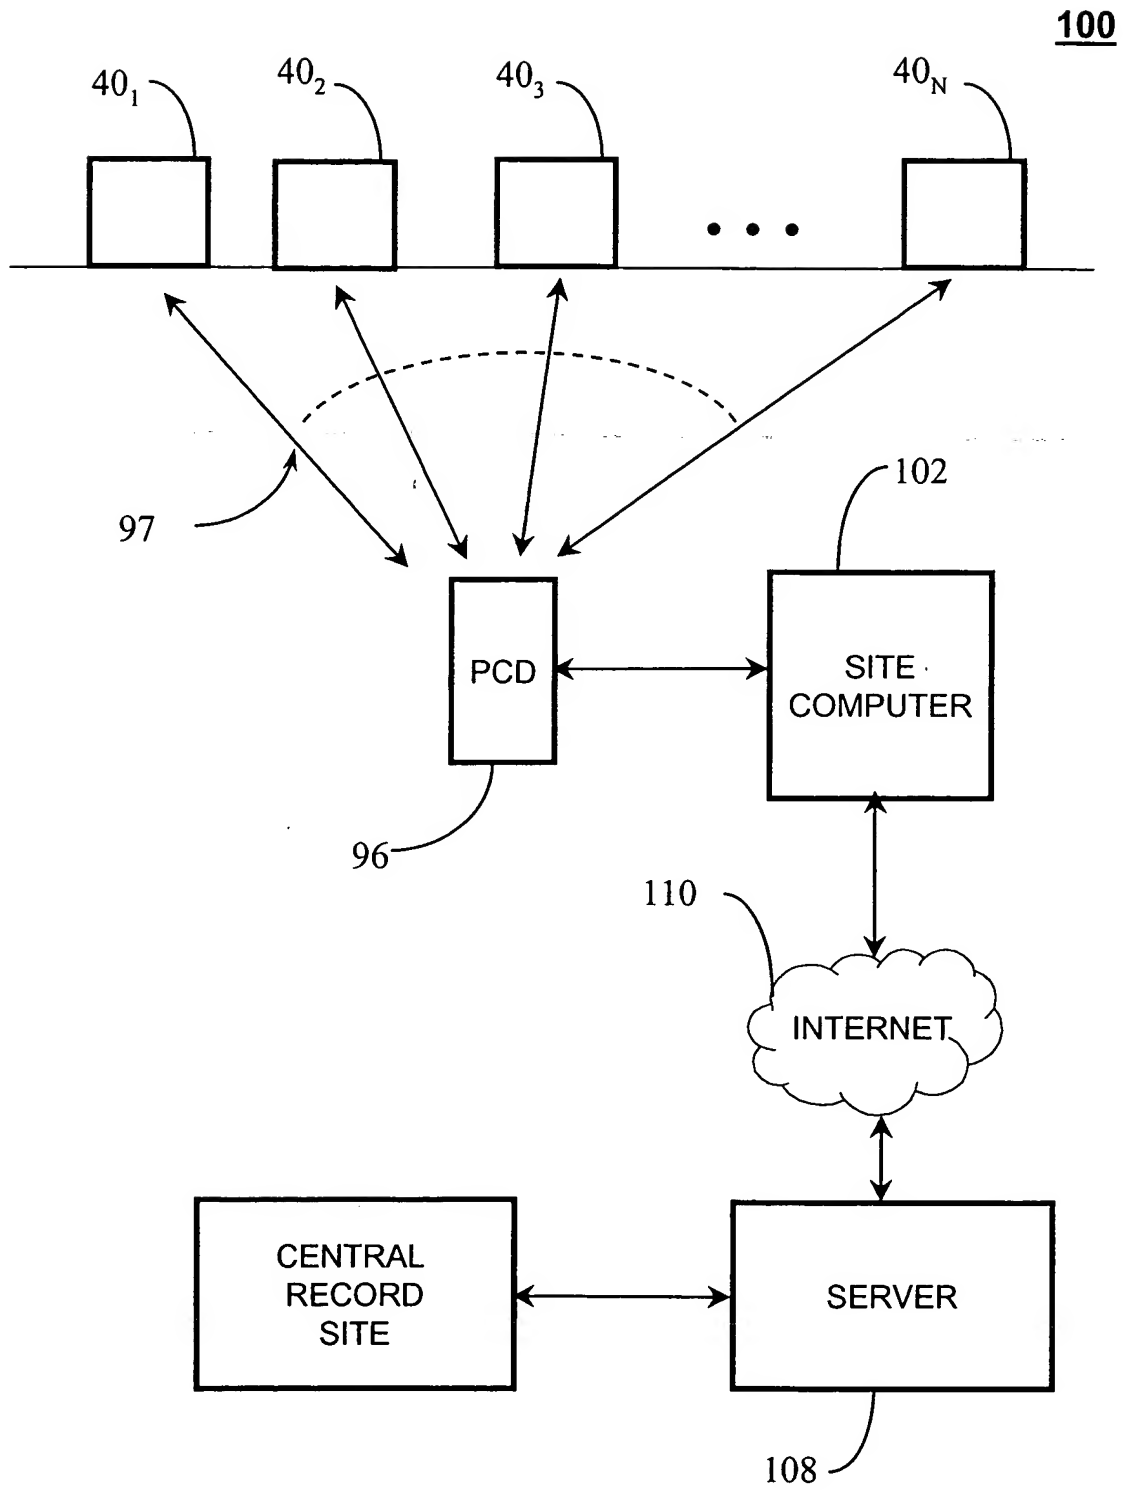

112 **FIG. 4a**

Synapse Commander

Get Faucet Data

Adjust Faucet

Scan For Problems

Information

Troubleshoot

Help

114 **FIG. 4b**

Information

Review & Modify Your Data

Reference Guide

Field Replacement Parts

Accessories

Contact Synapse

Contact Chicago Faucets

Help Ok

115 **FIG. 4c**

Adjust

Range

☐ Short ☐ Far

☒ Normal ☐ Maximum

☐ Metered

Mode

☒ Normal ☐ Scrub ☐ Water Saver

0 min 3 min

Help Set Other OK

FIG. 4d

Get Status Aim Palm at Faucet

Serial # 00000000

Overall Status Low Battery

Power Status Dead

Power	Settings	Usage	Location	Misc
Unloaded Volts	0 volts			
Loaded Volts	0 volts			
Time In Use	0 hours			
Replace Battery Date	1/20/03			

Help Note Next OK

FIG. 4e

Field Replacement Parts Galileo

Mechanical Parts

Lav Spout	570-001KJKCP
Gooseneck Spout	GN2AH8JKCP
Gooseneck Flange	170-202KJKCP
4" Coverplate	570-003KJKCP
8" Coverplate	570-008KJKCP
4" Cvrplate/Side-mix	550-018KJKCP
8" Cvrplate/Side-mix	570-135KJKCP

Electronics Miscellaneous

Mechanical Accessories OK

FIG. 4f

Reference Guide

MODE DEFINITIONS

NORMAL-Unit turns off 1.5 seconds after hands are removed.

METERED-Unit stays on for 10 seconds and then turns off.

SCRUB-Unit stays on for 60 seconds after removing hands.

WATER SAVER-Unit stays on 5 seconds and then turns off.

Back Next

Common Field Problems OK

FIG. 5

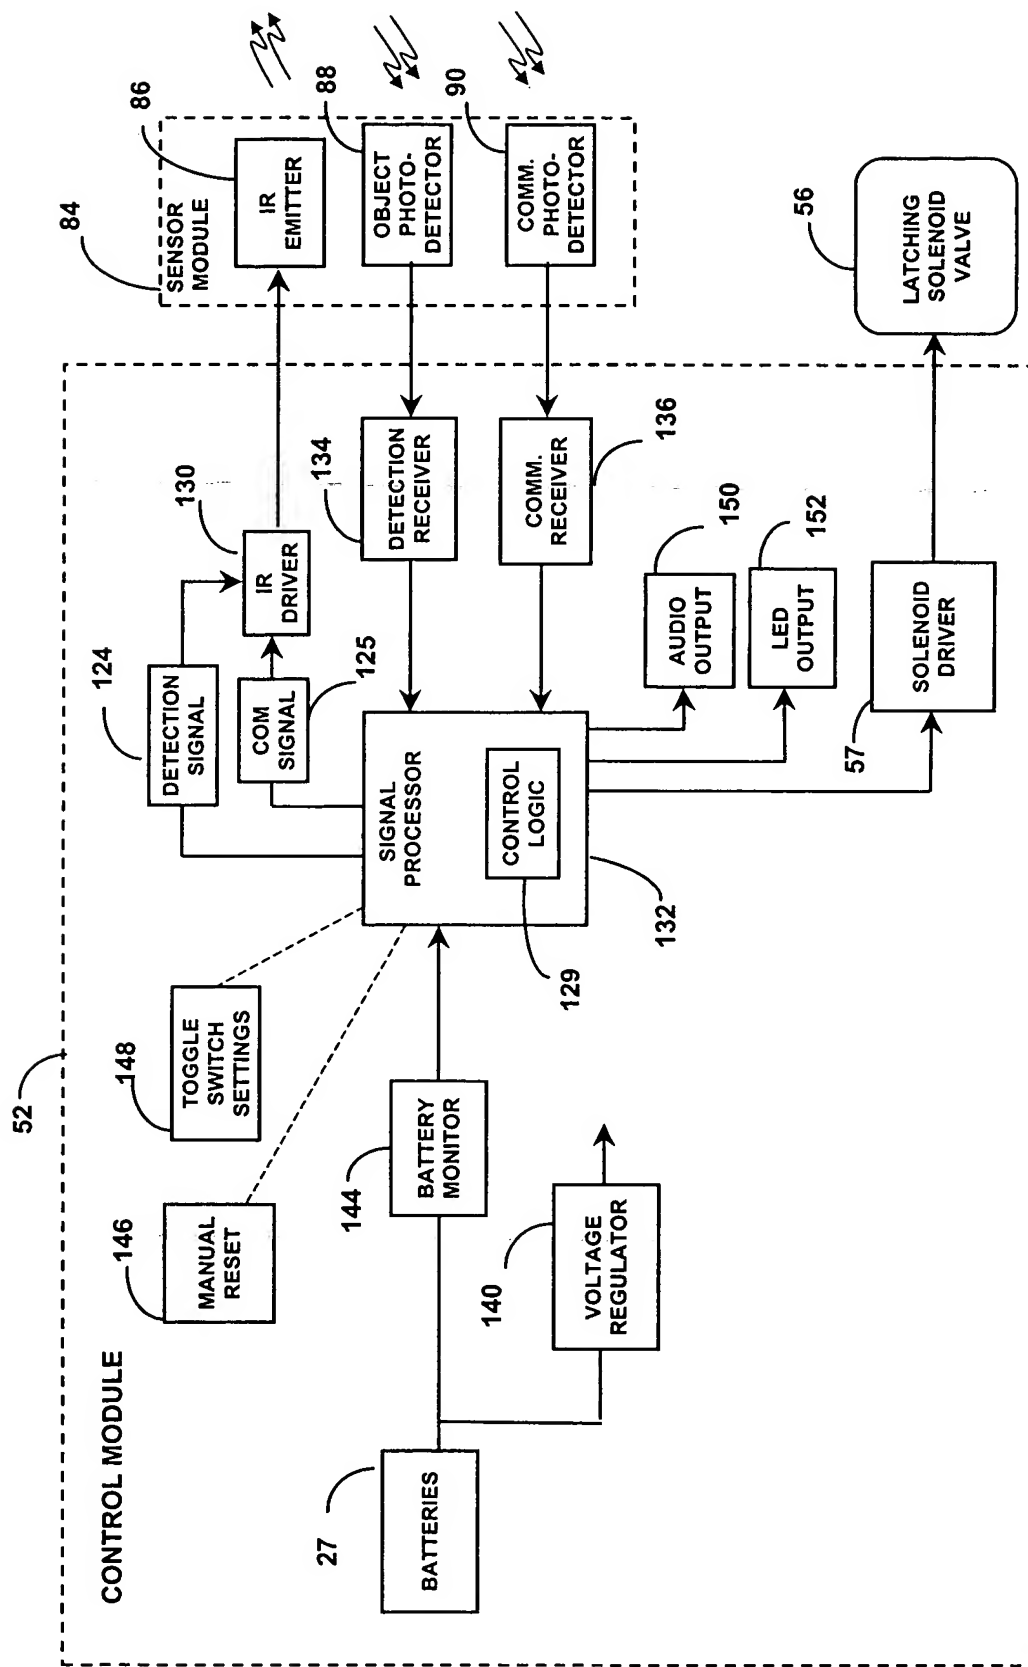


FIG. 6

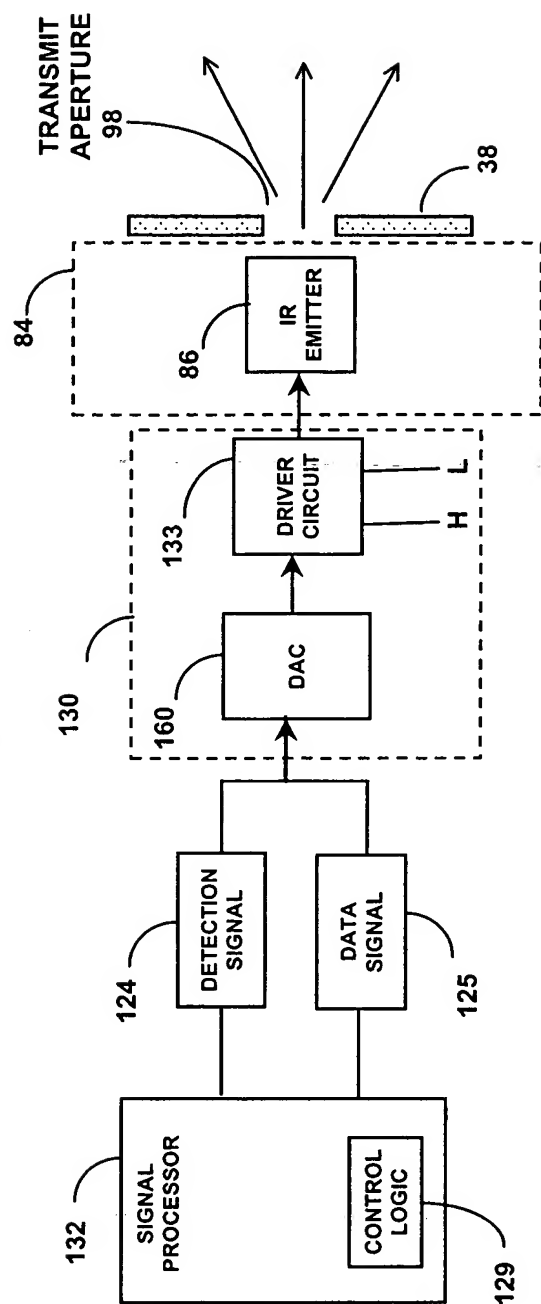
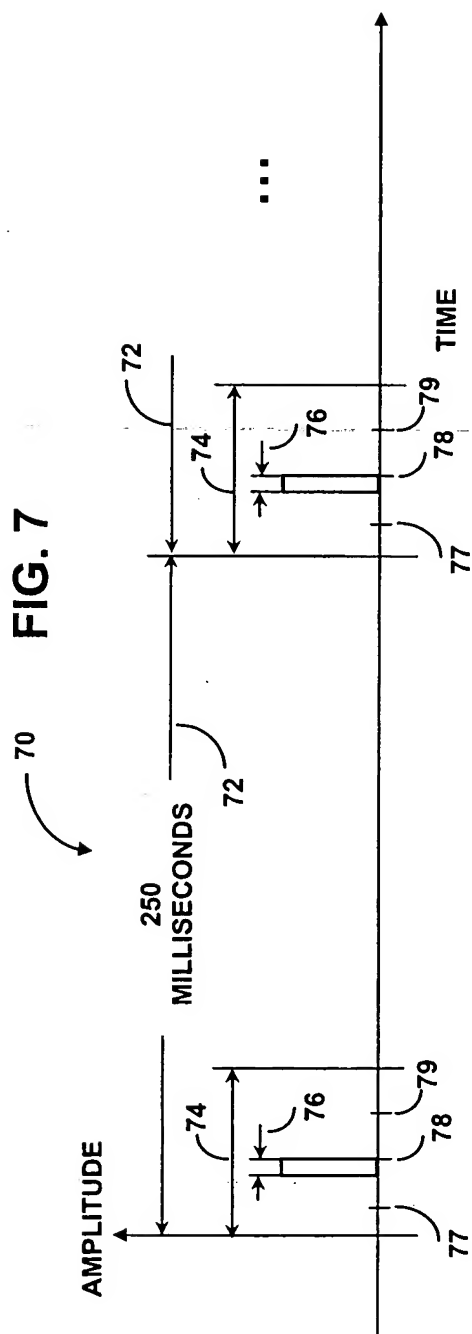
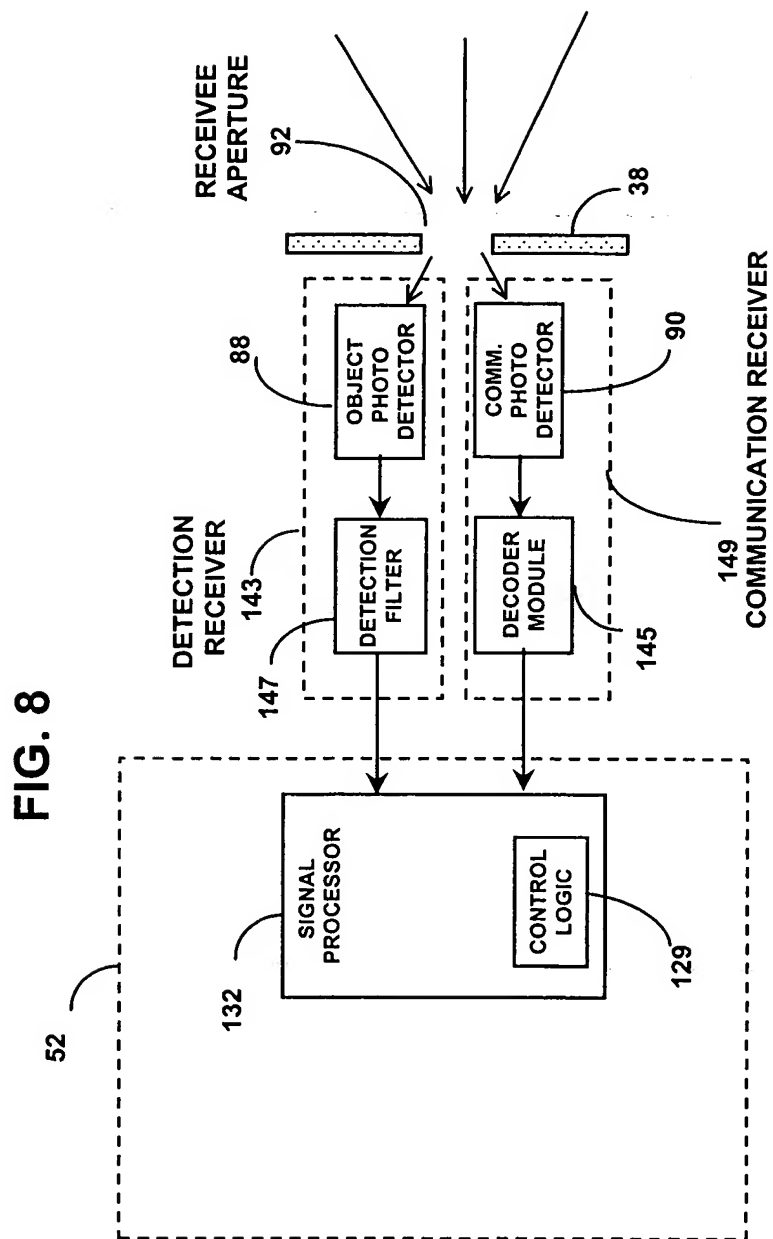


FIG. 7





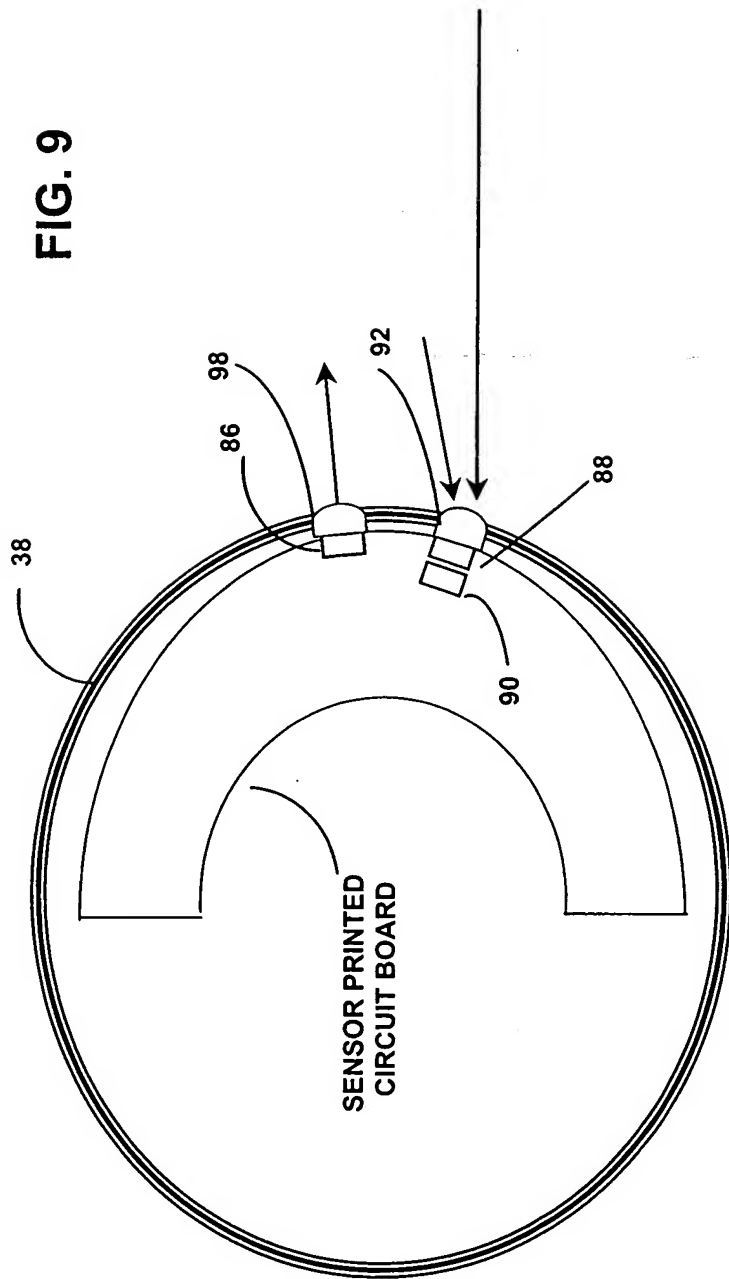


FIG. 9

FIG. 10a

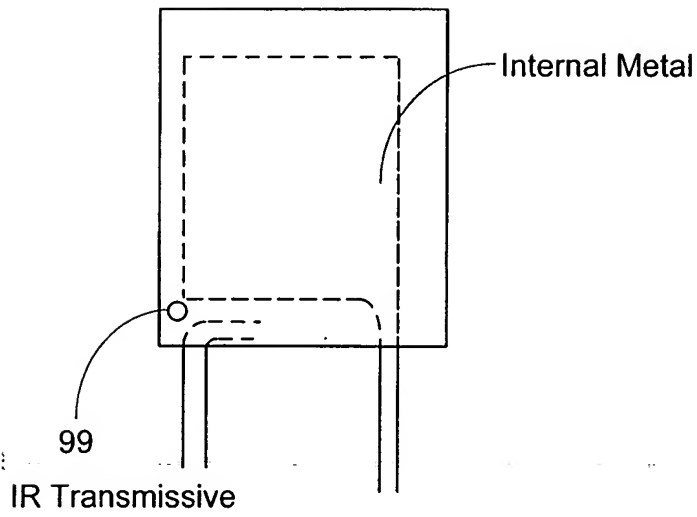


FIG. 10b

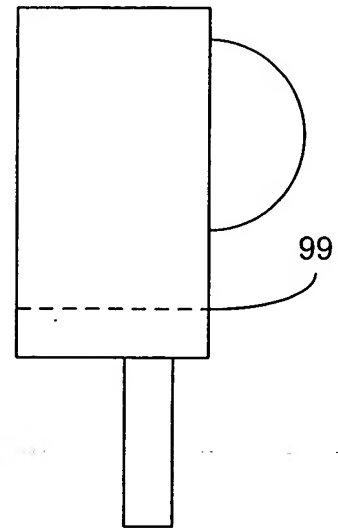


FIG. 10c

